

 
PLAYING THE DISCS IN OTHER DVD PLAYERS

Finalizing a Disc




You will need to finalize discs to play back in other DVD players.

Finalizing may take from several minutes up to an hour. A shorter recording period on the disc will require a longer time period for finalization. Do not unplug the power cord during finalization.

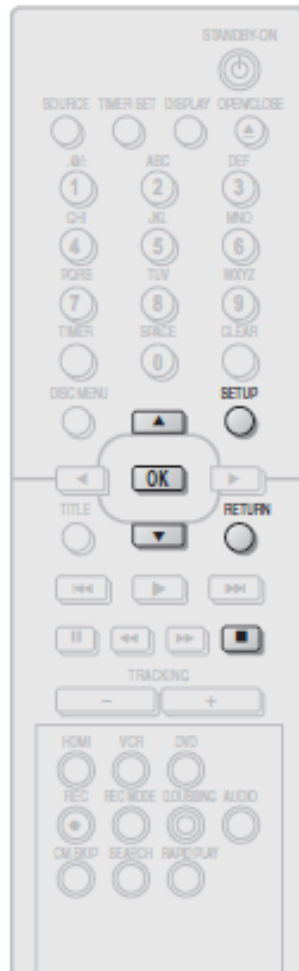

- 1 Press [SETUP].
- 2 Use [▲ / ▼] to select "Disc Edit", then press [OK].
"Disc Edit" menu will appear.
- 3 Use [▲ / ▼] to select "Finalize", then press [OK].
- 4 Use [▲ / ▼] to select "Yes", then press [OK].
e.g.) DVD+R, DVD-R

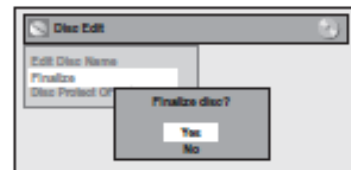


Finalizing will start.



To cancel finalizing...

(DVD-RW only)

- To cancel finalizing at step 4, press [STOP ■], select "Yes" with [▲ / ▼], then press [OK]. Finalizing is canceled and the unit will be in stop mode.

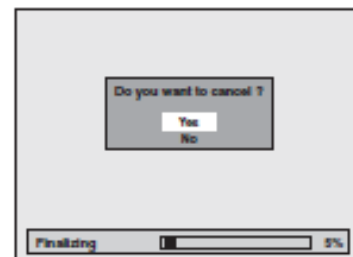

- If ⏸ appears when pressing [STOP ■], you cannot cancel finalizing because the finalizing has been in certain progress.
- When selecting "No" and press [OK] or [RETURN], finalizing will be continued.
- You cannot cancel finalizing the DVD+R/DVD-R once it has started.

Note

- Once you have finalized a DVD+R/ DVD-R, you cannot edit or record anything on that disc.
- There is no need to finalize DVD-RW.
- When you insert a DVD-RW finalized with this unit, "Undo Finalize" will appear instead of "Finalize".



To release the finalizing for the disc, select "Undo Finalize" at step 3.

* DO NOT power off during finalization, otherwise this will result in malfunction.

This operation may take a while to be completed.

- 5 Finalizing is completed.